

# Thank you for choosing Coretex as your ELD provider

The Coretex ELD solution is comprised of the Coretex 360 web application and the in-cab Coretex Drive app running on the tablet. When your company purchased the Coretex ELD system, an account and administrative user was created based on information provided with the 360 New Account form. Using these credentials, the administrator can log into the Coretex 360 application at <https://360na.coretex.com/> to create new users, define vehicles in the fleet, and set up drivers with driver IDs and unique PINs.

To introduce you to the Coretex ELD solution we offer training videos for both Drivers and Supervisors available at: <https://help.coretex.com/eld>

We also offer live online training webinars scheduled every Thursday.

## SESSION 1

### ELD In-cab Training

*Thursday at 2pm EST covering:*

- Driver Log in and Log out
- ELD Dashboard Features
- DVIR Pre-Trip and Post-Trip

## SESSION 2

### Core 360 Back Office Software Training

*Thursday at 4pm EST covering:*

- Basic 360 software features
- Managing ELD compliance

Join both training sessions from your computer, tablet or smartphone.

<https://global.gotomeeting.com/join/962413973>

You can also dial in using your phone.

Call: (224) 501-3316

Access Code: 962-413-973


If you require further assistance, please contact Coretex support at [NthAmSupport@coretex.com](mailto:NthAmSupport@coretex.com) or call our 360 support line at **888 887 0935** - press 1 for support and then 2 for Core360

Thank you for choosing Coretex.

As a quick primer of Core360 please review the following features

## Vehicle Tracking and Replay

To view the current location of all vehicles and a history of where they have been, select the **Tracking** tab, left click on any vehicle name on the right to center that vehicle on the map. Right click on any vehicle name on the right and select **Replay** to view a trip history.

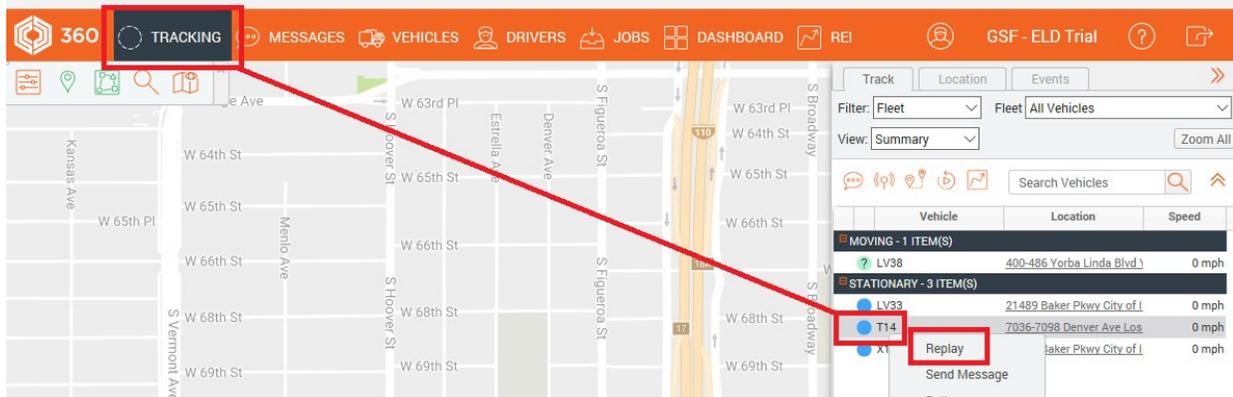


## Manage Unidentified Driving

To view and manage Unidentified Driving, go to **Drivers > Driver Hours/ELD > Unidentified Driving**.

Select a vehicle, select each record, and either **Mark as Reviewed** with a note, or select a driver name and **Assign to Driver**.


## View or Edit Logs by Log Date

To view ELD logs and run reports for ELD Compliance, go to **Drivers > Driver Hours/ELD > Driver Logs**.

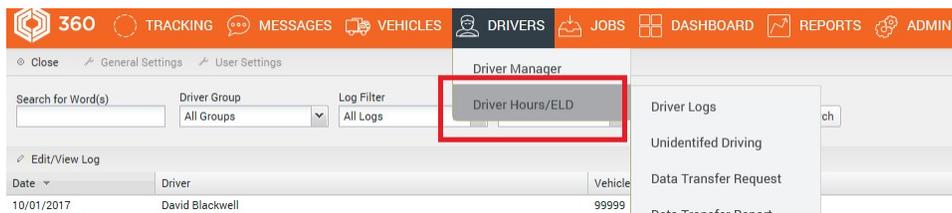


Select **Log Filter** to only see logs that are Uncertified or have Pending or Rejected edits within the date range.

Double click on a log to open the **Supervisor Edit Screen** for that date and driver.

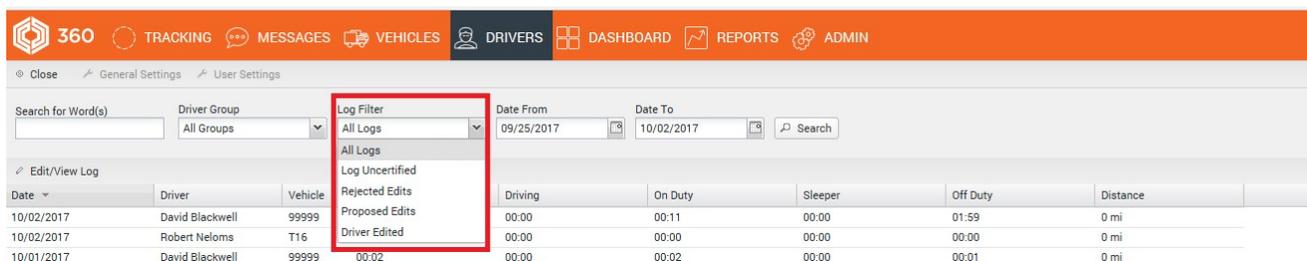

## View All Drivers – Edit or Add Logs by Driver


To view all Drivers, Hours, and Logs, go to **Drivers > Driver Manager**.

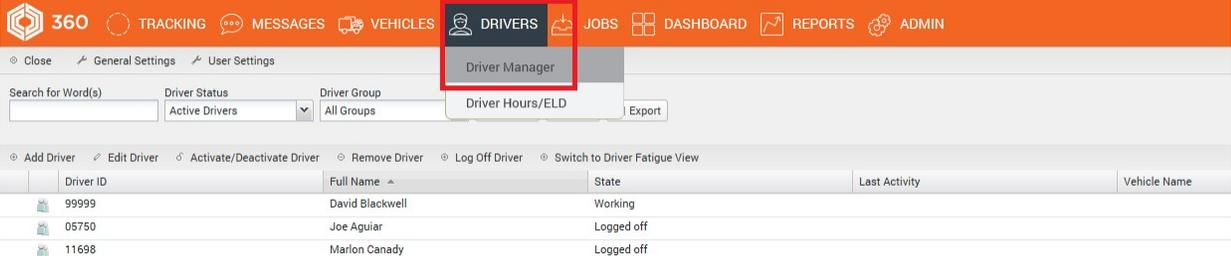

Driver ID	Full Name	State	Last Activity	Vehicle Name
99999	David Blackwell	Working		
05750	Joe Aguilar	Logged off		
11698	Marlon Canady	Logged off		

Double click on a driver name to open the Edit Driver window. Then click on **Driver Logs** to view existing logs for days worked by that driver.

Click **Add New Log** to create a log for a date not displayed or select an existing log and click **Edit/View Log**. This will launch the **Supervisor Edit Screen**.

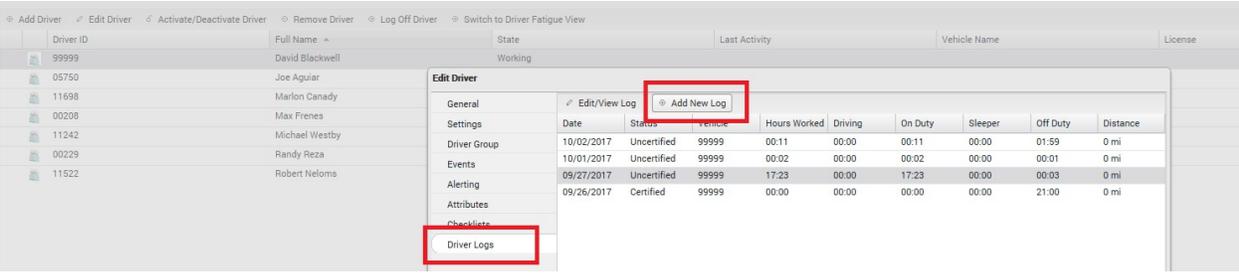

Date	Status	Vehicle	Hours Worked	Driving	On Duty	Sleeper	Off Duty	Distance
10/02/2017	Uncertified	99999	00:11	00:00	00:11	00:00	01:59	0 mi
10/01/2017	Uncertified	99999	00:02	00:00	00:02	00:00	00:01	0 mi
09/27/2017	Uncertified	99999	17:23	00:00	17:23	00:00	00:03	0 mi
09/26/2017	Certified	99999	00:00	00:00	00:00	00:00	21:00	0 mi